



### Get Started

Thank you for choosing DOOGEE smart phones. In order to make your phone work with the best performance, please read this user manual carefully before using it.

### File Transfer

#### JPC-Phone File Transfer

Once the phone is connected to a PC with USB, the PC will charge the mobile phone automatically.

- Drag the notification panel down and tap "USB" to activate the USB connection.
- Click "Transfer Files".
- The device is recognized as a removable disk by the computer. Open the folder appeared on the computer and transfer files from your phone to PC and vice versa.

#### Use USB

- Charge the device
- Transfer files
- Transfer photos
- Transfer music
- Use device as MTP

### Keys and Parts

The phone includes many parts, Camera, Flash Light, Loudspeaker, USB port, Earpiece, Microphone, etc. Refer to the below diagram for more using details.

Key	Directions
1 Loudspeaker	Press the speaker to hear the volume and play music.
2 Earpiece	Press the earpiece to hear the volume and play music.
3 Camera	Take photos and videos with the camera and record.
4 Flash Light	Use the flash light to take photos in low light.
5 Microphone	Use the microphone to make calls and record voice.
6 Volume keys	Adjust the volume.
7 Power key	Power on/off the phone.
8 Home key	Return to the home screen.
9 USB port	Connect the phone to a computer or other USB device.
10 Camera lens	Take photos and videos.
11 Earpiece	Use the earpiece to hear the volume and play music.
12 Microphone	Use the microphone to make calls and record voice.

### Lock and Unlock the Screen

#### Lock the Screen

Press the "Power" key to lock the screen. The screen will be locked and the phone will be in a power-off state.

#### Unlock the Screen

Press the "Power" key to unlock the screen. The screen will be unlocked and the phone will be in a power-on state.

#### Change Screen Lock

- Go to the Home screen, tap "Settings" > "Security" > "Screen Lock".
- Choose the screen lock method.

#### Notification Panel

Notification icons on the status bar report the new arrival of messages, calls, and other information. You can swipe down from the top of the screen to unlock the screen.

Icons	Descriptions	Icons	Descriptions
Battery	Battery	Bluetooth	Bluetooth
Wi-Fi	Wi-Fi	Flashlight	Flashlight
Airplane Mode	Airplane Mode	AutoRotate	AutoRotate
Location	Location	Eye Protection	Eye Protection
Do Not Disturb	Do Not Disturb		

### Change Wallpaper

There are ways to set personalized wallpaper:

- Press and hold any empty space on the screen, select "Wallpaper".
- Tap "Customize" > "Wallpaper" > "Select a picture" > "Add".
- Tap "Gallery" > "Choose photos" > "Select photo" > "Wallpaper".

#### Make a Call

#### Make a Call Display

- Tap the Home screen, touch the icon "Phone" to display the dialing keypad.
- Tap the number you want to dial to input the telephone number and dial the number to make a call.

#### Make a Call From Contacts

Tap the Home screen, touch "Contacts" > "Add the one you want to call", and then tap the phone number to make a call.

#### Make a Call From Call Logs

On the Home screen, touch "Logs" > "Call", select a call from call logs and click to make a call.

Note: If you have inserted two SIM cards to the phone, there will be two call logs on the dialing interface. Choose SIM 1 or SIM 2 to make a call.

### Reject a Call by Sending a Reply Message

When you are incapable to answer an incoming call, you can send a reply message by replying it.

- On the incoming call interface, drag the message icon up to view the obtained system reply message.
- Tap any of them to send out and then the call will be rejected.

### Add a Contact

- Enter "Contacts" on the desktop, touch the "+" icon, select the storage location.
- Fill in the new contact's information and save.

### Messaging

#### Send a New Message

Enter "Messages" to click the icon "Send a new message" to start the messaging function.

#### Receive a New Message

When there is a new message comes, you will appear the notification bar to notify you. Slide the notification down to check the notification and read it. Or tap to "Messaging", read the new message directly.

### Browser

#### Editing SMS and MMS

- You can compose a new SMS by cutting or copying text.
- Tap the "Send" icon to send the message.

#### Open Browser

- On the Home screen, touch "Browser".
- Touch the touch pad at the top of the screen to input a website address.
- Tap the icon "Go".

#### Browser Options

When browsing a web page, you can click to scroll the screen to view other parts of the web page.

- Touch the icon "Back" to return to the previous page.
- Touch the icon "Home" to return to the Home screen.
- Touch the icon "Refresh" to refresh the current web page as a bookmark.
- Touch the icon "History" to view the visited websites or pages you've browsed.
- Touch the icon "Tabs" to "Manage page" to view the websites with others.

### Browser Settings

On the browser interface, touch the icon "Settings" > "Settings" to open the settings according to the requirement.

Note: You must have a mobile data or Wi-Fi connection to access the internet.

### Enjoy Music

You can listen to the music saved in your phone through the music player.

### Download Applications from Play Store

Steps to download an APP from the Play Store:

- Tap the icon "Play Store".
- Tap the icon "Search".
- Tap the icon "Install".

### Manage Applications

Steps to manage applications:

- Tap the icon "Settings" > "Apps".
- Tap the icon "All".
- Tap the icon "Force stop".
- Tap the icon "Uninstall".

### Maintenance and Safety

Please read this safety information carefully so that you can use your phone in a safe condition.

#### 1. Around children

Be very careful with children and your phone. Be especially careful with children's toys, while watching these little parts may cause asphyxiation.

#### 2. Fire hazard

Do not leave your phone near heat sources such as radiators or cookers. Do not leave your phone charging near flammable materials as there is a risk of fire.

#### 3. As a gas station

Do not use your phone at gas station. In fact, it is always best to turn off whenever you're near tanks, chemicals and other flammable materials.

#### 4. Contact with liquid

Do not use your phone in or near water, such as swimming pools, hot tubs, saunas, etc. Do not use your phone in or near water, such as swimming pools, hot tubs, saunas, etc. Do not use your phone in or near water, such as swimming pools, hot tubs, saunas, etc.

#### 5. Shock and Impact

Protect your phone from shock and impact. Some parts of the phone are not made from glass and might break if the phone is exposed or is subjected to severe impact. Avoid dropping the phone and touching the screen with sharp objects.

#### 6. Maintenance

Do not use disposable your phone as there is a risk of electric shock. If you want to clean your phone, please use a dry cloth which can use a substance, such as alcohol.

#### 7. Temperature

Do not use the phone in the environment at too high or too low temperature, never expose the phone to extreme temperature or directly sun surrounding. The suitable temperature range for use is 0°C to 45°C.

