



# Newell

## Namiot bezcieniowy Instrukcja obsługi

### W zestawie:

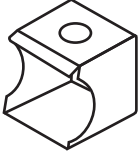


 Studio



Tła

 (6 kolorów: czarne, białe, pomarańczowe, czerwone, zielone, niebieskie)



Kabel USB (Napięcie: 5V)


### Opis:

Zestaw został zaprojektowany z myślą o jak najlepszej mobilności. Doskonale sprawdzi się przy fotografowaniu mniejszych przedmiotów. Ze względu na niewielkie gabaryty urządzenie posiada ograniczoną moc oświetlenia. Doskonała użyteczność w połączeniu z wysoką mobilnością pozwala zastosować namiot jako tymczasowe studio.




Zasilanie: 5 V, 1 A (Napięcie powyżej 5 V nie jest wspierane - Quick Charge).


### Montaż

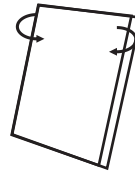

Rozłożyć namiot delikatnie, pociągając za krawędzie.

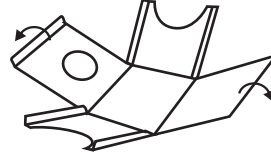


Spinki pozwalają połączyć krawędzie.

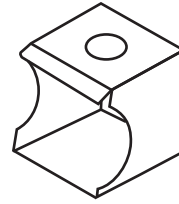


Po skorygowaniu ustawienia ścianek, powiesić tło. Następnie podłączyć zasilanie. Namiot jest gotowy do użytku.


### Demontaż

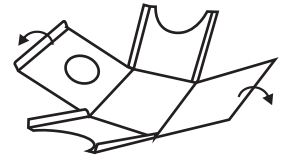

Rozłączyć ścianki namiotu.

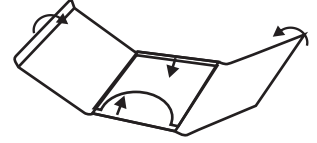

Złożyć górę i dół namiotu. Tło można włożyć do środka.

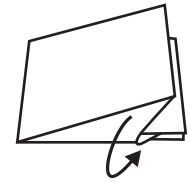

Następnie złożyć boczne ścianki.

Dystrybutor: FOXFOTO  
ul. Rąbieńska 18, 94-227 Łódź,



scan for more


CE FC  
Wyprodukowano w Chinach

# Newell


## Photography Light Box

## User Manual

### Packing List :

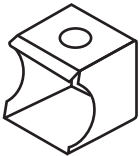


Main Studio Box

 

Background

 (6 Colors: Black, White, Orange, Blue, Red, Green)



Micro USB (Input Voltage: 5V)


### Product Instructions :

Portable studio is designed for portability specially. It suits for shooting small subjects and will work excellent everywhere and anytime. But the lighting source quantity and variety were limited due to its size and protability. It is recommended to be used as a temporary studio with excellent easy-to-use feature and premium portability.




Power supply: 5V, 1A (Not support the USB power output voltage more than 5V, such as Quick Charge).


### Unfolding Steps

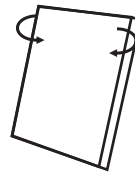

Unfold the studio with pulling from the edge, easy and smooth to open.

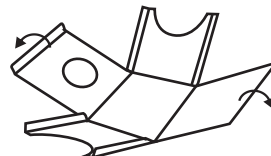


The buckle allow you to dock the four-corner easily, you can sense when they have been attached.

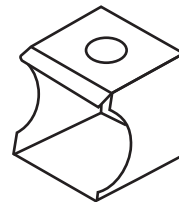


Simply adjust it, hang up the background and connect to the power supply then start your shooting now.


### Folding Steps

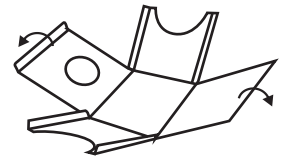

Pull apart the studio from the top and bottom, it will be unfolded easily.

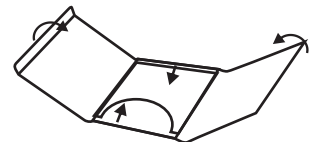

Fold the top side and middle with buckle positioning. Put the background cloth inside.

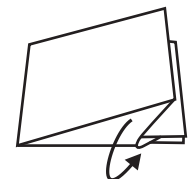

Fold the bottom side and push the edge with radius corner into the gap between the folded parts. And put it back into the bag-pack. Here we done.

Distributor: FOXFOTO  
ul. Rabienska 18, 94-227 Lodz,



scan for more

CE FC  
Made in China